
Assembly & Installation Instructions

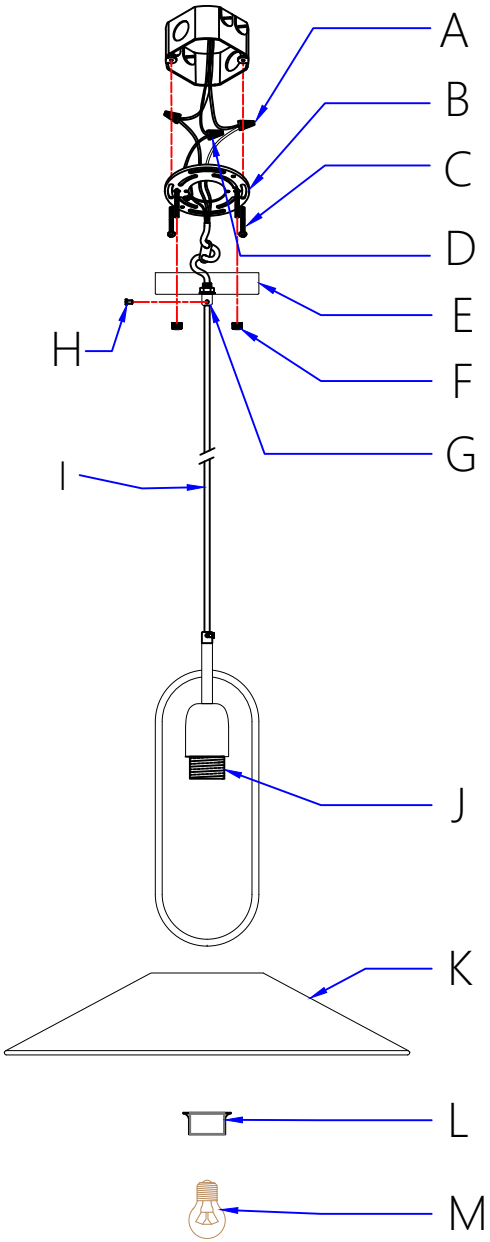

PREPARATION before INSTALLATION:

1. If an existing fixture is being replaced, remove it and note to which wire in the outlet box the original fixture was attached.
2. Before discarding the carton, double-check the packaging to make sure all parts have been found.
3. This fixture was designed to be mounted on an octagon outlet box. The box must be securely mounted to the structure of the building.

IMPORTANT:

1. WARNING - Disconnect power before relamping or wiring the fixture.
Turn off the entire electrical circuit to which the lighting fixture is attached.
2. Installation and maintenance of this fixture should be completed by a licensed electrician.
3. Failure to install the fixture correctly could result in serious injury or death.
4. Read all instructions before starting installation.

INSTALLATION STEPS:

1. Turn off the power switch.
2. Loosen the plastic thumb screw (H) on the cord lock (G) counterclockwise, adjust the hanging cord to the desired height, then tighten the screw to secure the cord. Move the figure-8 clip to the bottom of the ceiling canopy.
3. Secure the mounting plate (B) to the junction box with the screws (C).
4. Connect the wires (I) using the wire caps as follows:
Connect the fixture's LIVE/HOT wire to the home LIVE/HOT wire.
Connect the fixture's NEUTRAL wire to the home NEUTRAL wire.
Connect the fixture's GROUND wire (D) to the home GROUND wire to the mounting plate with the green screw (A).
*Note: Ensure no wire strands are exposed.
5. Secure the straight-edge plate (E) to the mounting plate (B) using decorative screws (F).
6. Install the lampshade (K) onto the lamp holder (J), then use the lamp holder lock ring (L) to secure the lampshade (K) to the lamp holder (J).
7. Install the bulb (M) (not included) into the lamp holder (J).
8. Restore electrical power and check if the bulb (not included) works properly.