

INSTALLATION & USER MANUAL

20 INCH CEILING FAN WITH LIGHT

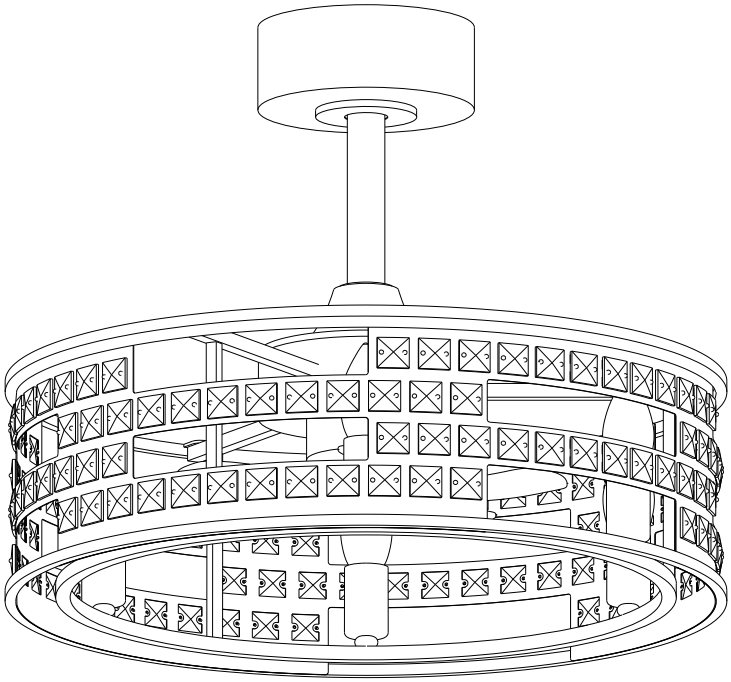

Exploded View

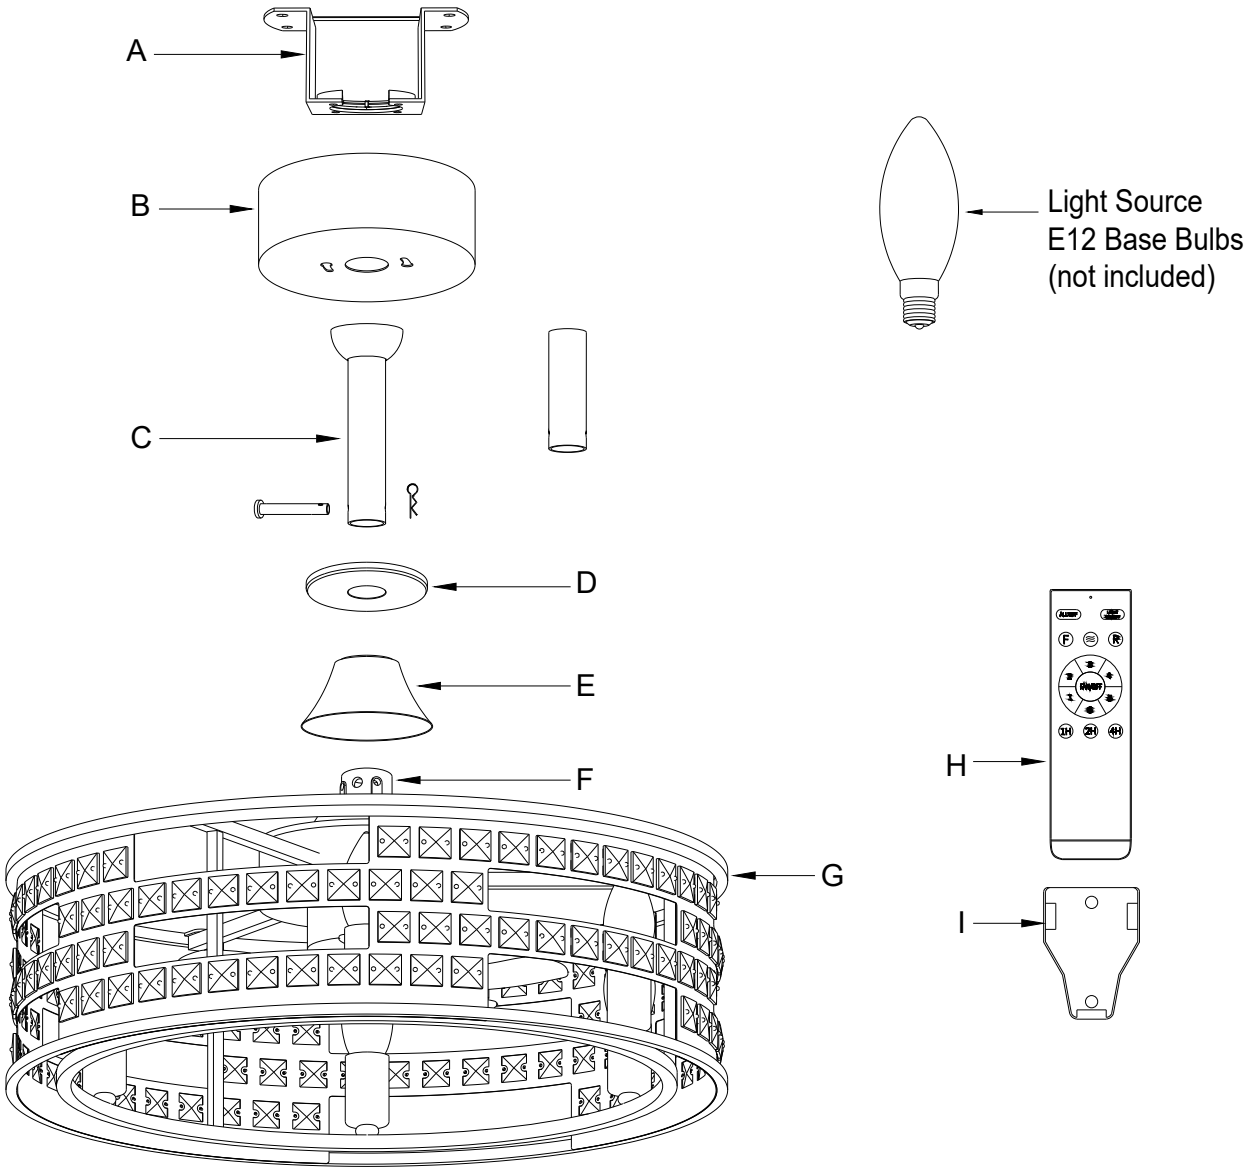

Prat	Description	Quantity
A	Hanger Bracket	1
B	Canopy	1
C	Downrod 4"+8"	1+1
D	Canopy Cover	1
E	Metal Cover	1

Prat	Description	Quantity
F	Downrod Hub	1
G	Lamp Body	1
H	Remote Control	1
I	Remote Holder	1

Hardware Included

Wood Screw	5PCS	Wire Nut	3PCS	Washer	8PCS
Plastic expansion pipe	4PCS	Expansion Screw	2PCS	J-box Screw	3PCS

Installation Instructions

Step1 MOUNTING

- Take out fan motor housing.
- Remove cotter pin and bolt from yoke.（Fig.1a)
- Loosen jam screw in yoke until it is flush with the inside surface.（Fig.1b)
- Insert the down rod into the connection of the lamp body and lock the bolt with a cotter pin.（Fig.1c)
- Route wires exiting the motor through the yoke cover, canopy, and down rod.（Fig.1d)
- Insert bolt through teh hole in and down rod. Be careful not to damage or cut the fan wires.（Fig.1e)
- Secure the down rod in position by tightening the jam screws. The side yoke cover is down and it will flush with the motor housing.

CAUTION: To ensure wobble-free operation and to avoid damage to the fan, the down rod and the set screw must be completely tightened.

Warning:
For your safety, please turn off the power of the fuse box or circuit breaker before all your actions.

Fig.1a

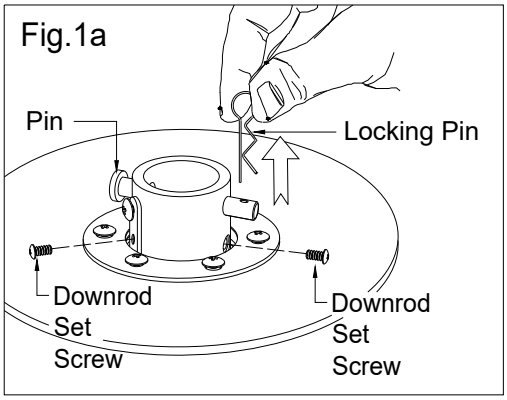


Fig.1b

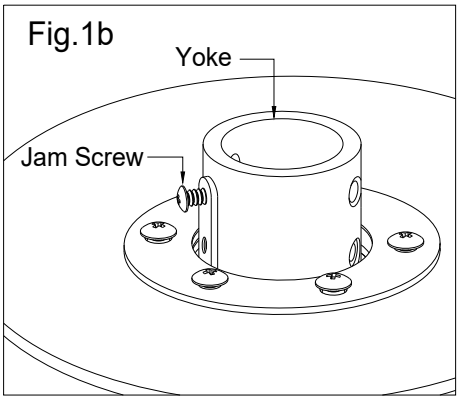


Fig.1c

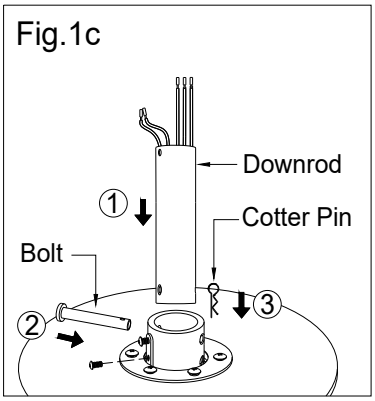
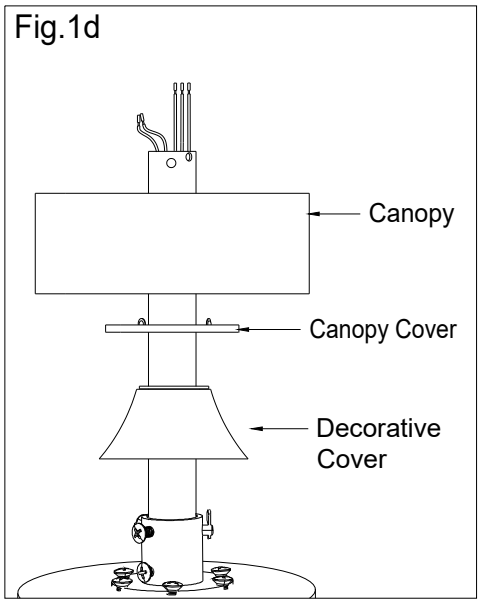


Fig.1d




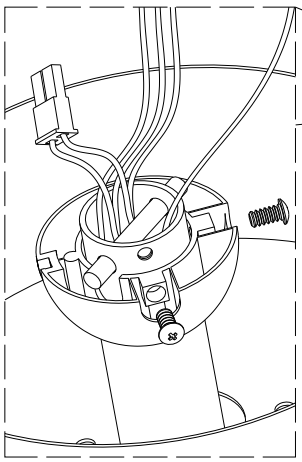


Fig.1e

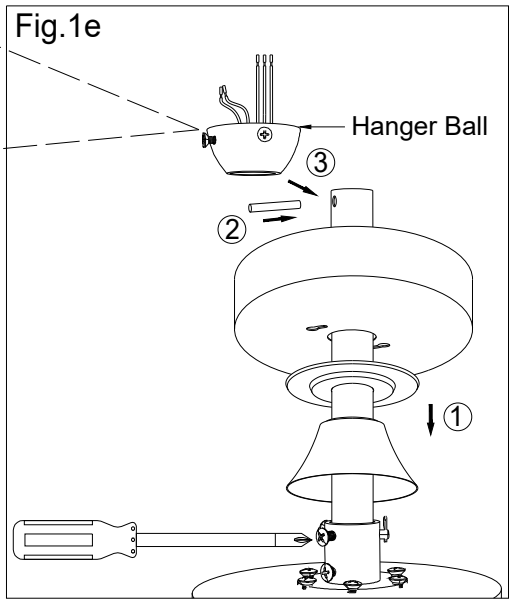

Installation Instructions

Step2 INSTALL MOUNTING BRACKET

- Use outlet box when:Secure the mounting bracket to the outlet box (not included)using the provided screws and metal washers.(Fig. 3a)
- Use wood screws when:Securing to support structure with apporved electrical outlet box.Fasten the mounting bracket to the ceiling with Wood Screw.(Fig. 2b)
- Use expansion screws when: Drill holes with an electric drill (o8 mm).Use expansion screws to fix the mounting bracket to the ceiling.(Fig. 2c)

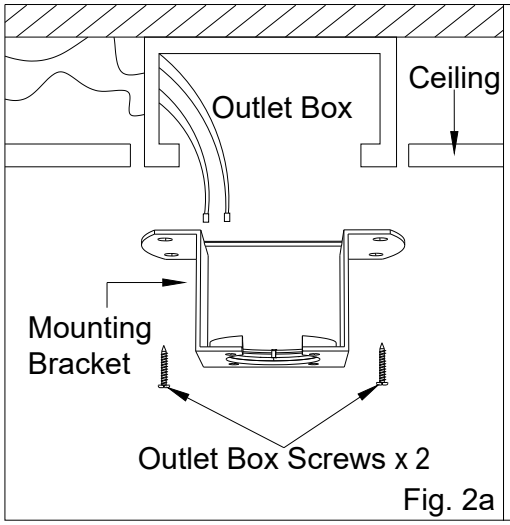


Fig. 2a

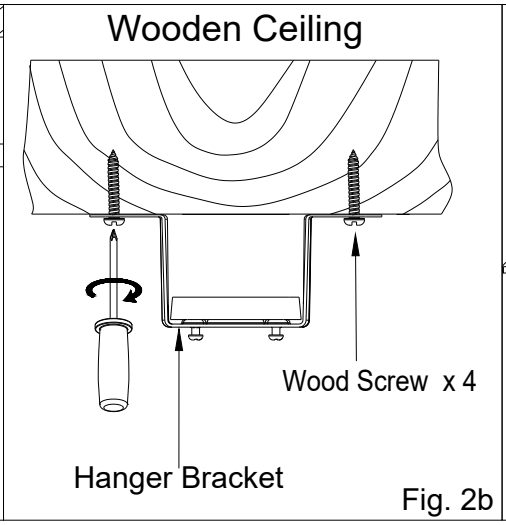


Fig. 2b


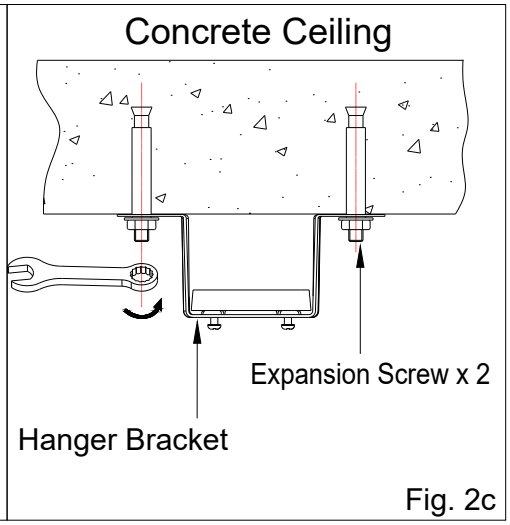


Fig. 2c

Step3 ELECTRICAL CONNECTION

Use wire connectors to connect household supply and receiver wires according to the diagram and the following steps:

- Connect the white wire with the "Public Zero Line" label to the white fan wire.
- Connect the green wire from the down rod and mounting bracket to the Bare / Green(ground) supply wire.
- Connect the blue wire with the "AC IN L" label to the black supply wire.
- Connect the white wire with the "AC IN N" label to the white supply wire.

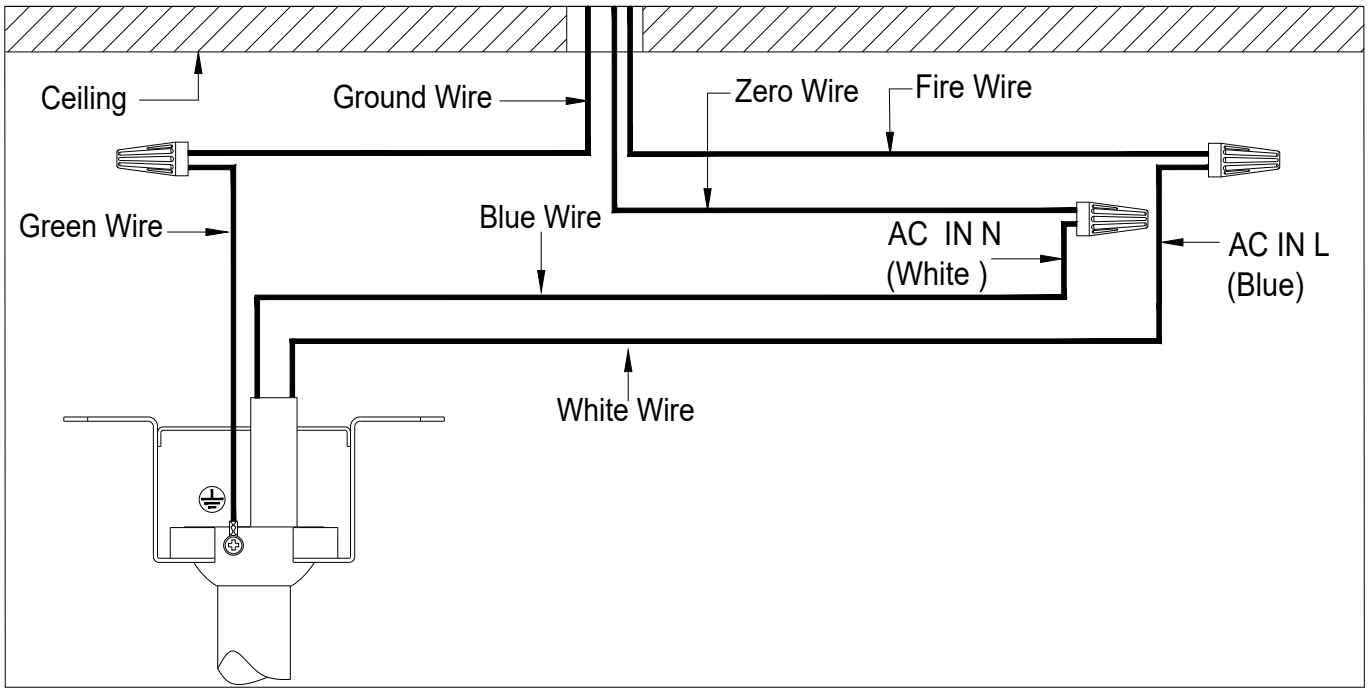

Installation Instructions

Step4 CONNECT THE HANGING BALL

- Hang the ball joint and the fan onto the bracket, make sure the guide pin of the bracket is fitted into slot of ball joint.

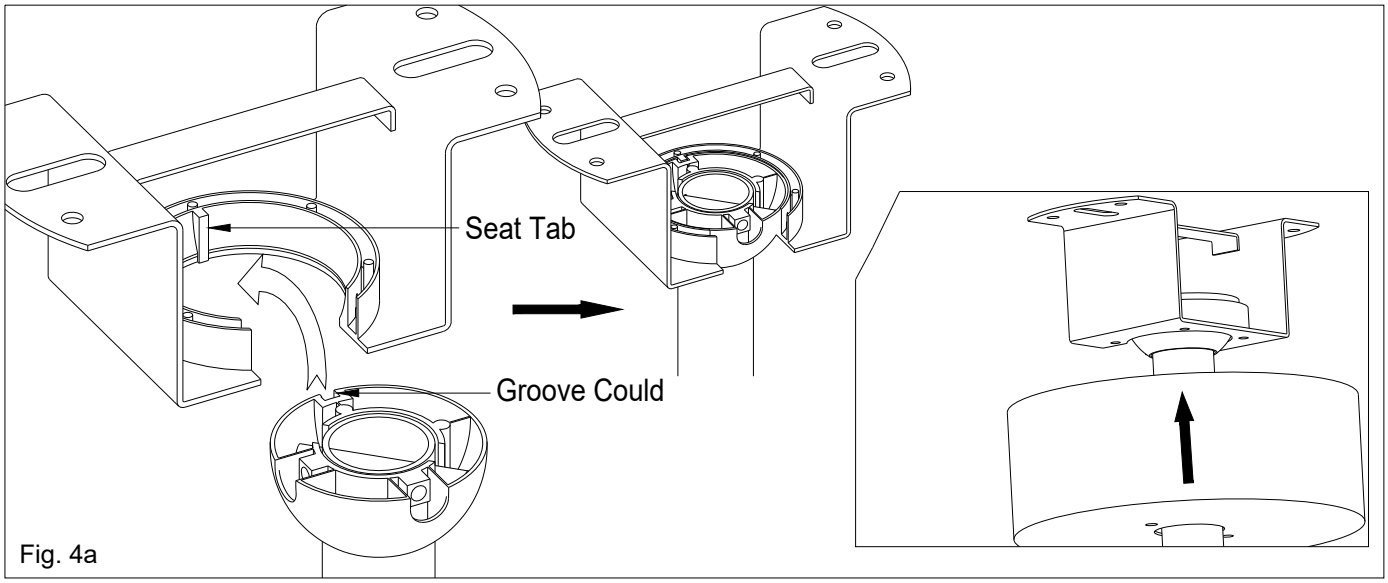
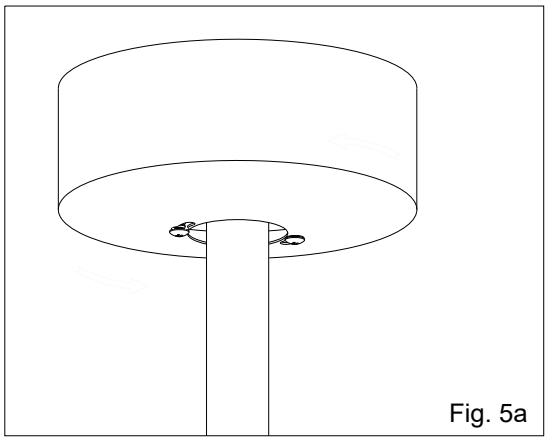



Fig. 4a

WARNING: Failure to seat tab in groove could cause damage to electrical wires and possible shock or fire hazard.

Step5 INSTALLING THE CANOPY


- Place two screws and washers on mounting plate which correspond with slots in canopy. Screw in two turns.
- When installing the canopy, ensure the antenna is not pressed by the canopy.


Fig. 5a

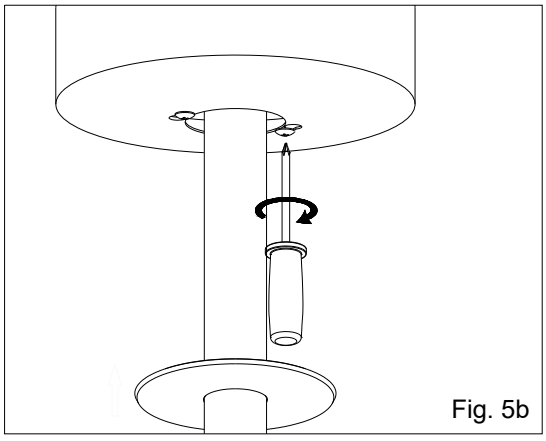
Fig. 5b

NOTE: When installing fan on sloped ceiling, make sure tab on hanger bracket faces towards the top of the slope. Depending on the slope, a longer downrod may be required to prevent fan blades from hitting the ceiling.

Remote Control Instructions

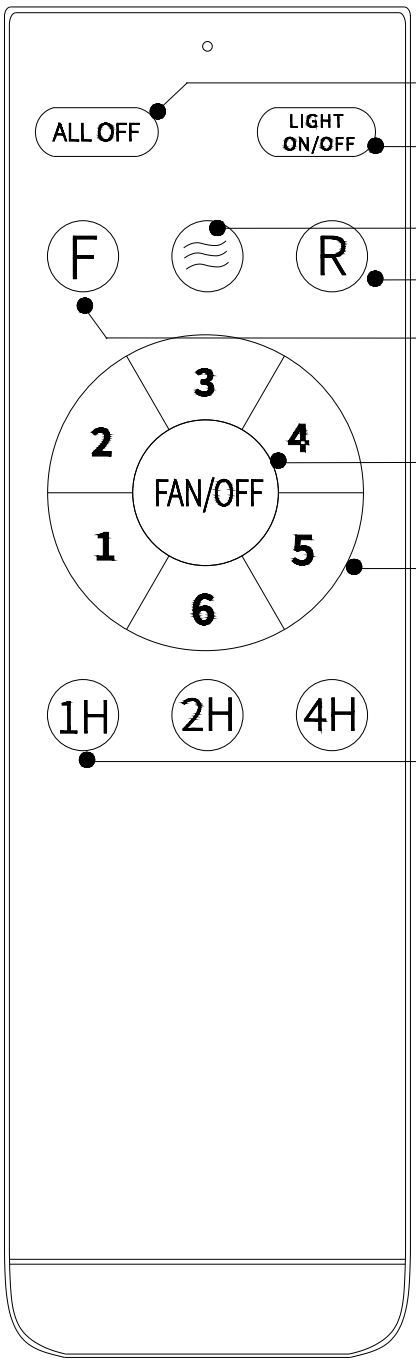

Light & Fan all OFF

Light ON/OFF

Natural wind

Reverse

Forward

Fan Stop

Fan Speed

Fan stop & light off after 1 hours

Fan stop & light off after 2 hours


Fan stop & light off after 4 hours

A A A 1.5V

2*AAA Battery (1.5V)
(Batteries Not Included)

Installing Wall Plate:

Attach wall plate using the two provided screws.

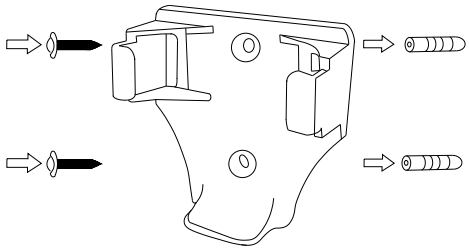

To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

Pairing method: (single/multiple fans)
The remote control transmitter can be used to control multiple receivers.

1.For the ceiling fan you want to pair, turn the main power switch off for at least10 seconds.

2.Turn on the main power wall switch of the ceiling fan, then within 3 seconds,press and hold the ALL OFF button.

3.Long press for 5 seconds, then release the button, and the pairing process is complete. If the pairing process is unsuccessful, repeat steps 1 through 3 after turning off the wall switch for 1 minute.