
Assembly & Installation Instructions

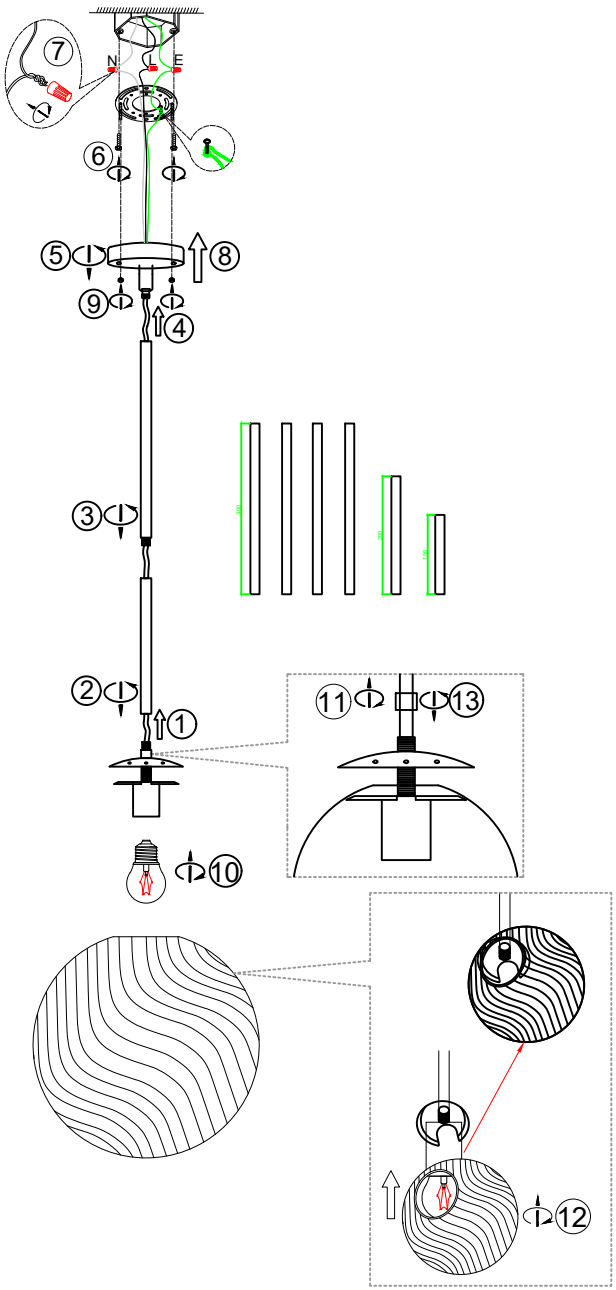

PREPARATION before INSTALLATION:

1. If an existing fixture is being replaced, remove it and note to which wire in the outlet box the original fixture was attached.
2. Before discarding the carton, double-check the packaging to make sure all parts have been found.
3. This fixture was designed to be mounted on an octagon outlet box. The box must be securely mounted to the structure of the building.

IMPORTANT:

1. WARNING - Disconnect power before relamping or wiring the fixture.
Turn off the entire electrical circuit to which the lighting fixture is attached.
2. Installation and maintenance of this fixture should be completed by a licensed electrician.
3. Failure to install the fixture correctly could result in serious injury or death.
4. Read all instructions before starting installation.

INSTALLATION STEPS:

1-3.Thread fixture wires and ground wire through the suspension rod, then screw the rod firmly onto the fixture body. Rod segments may be spliced to adjust overall length.
4-5.Feed fixture wires and ground wire through the ceiling canopy-swivel joint assembly, then tighten the swivel joint onto the top of suspension rod. (This fixture is suitable for sloped-ceiling installation.)
6.Secure the mounting plate tightly to the junction box with screws.
7.Connect the wires by using the wire caps as follows:
Connect the fixture's LIVE wire to the home LIVE (BLACK) wire.
Connect the fixture's NEUTRAL wire to the home NEUTRAL (WHITE) wire.
Secure the fixture's ground wire to the mounting bracket with the green grounding screw, then connect the fixture's ground wire to the home ground wire.
Tuck all wires into the junction box.
Note: make sure no bare wires are exposed to prevent electric leakage.
8-9.Place the ceiling canopy over the mounting plate and lock it by tightening the decorative nut.
10.Install the bulb (Bulb not included).
11-13.Loosen the metal locking nut counterclockwise, then slide the metal locking nut and curved cover upward. Fit the glass shade into the slotted metal bracket, place the curved cover over the glass shade, then tighten the metal locking nut clockwise to secure the glass shade.
(Note: Tighten only until the glass is seated. Do not over-tighten to prevent glass breakage.)